

# Quick Start Guide

## Basic Operation

### Power:


1. Press the **POWER (ON/OFF)** button down on front panel to power on the unit.  
The unit is on standby and the standby indicator lights up.
2. Press the **STANDBY/ON** button to turn the unit on.

### Function:

Press the **FUNCTION** button on the remote control or front panel to select desired function. i.e. DVD, USB, AV IN, AUX IN or RADIO.

1. For DVD, press the **FUNCTION** button repeatedly until "DVD" is displayed on front panel display.
2. For USB, press the **FUNCTION** button repeatedly until "USB" is displayed on front panel display.
3. For AV IN, press the **FUNCTION** button repeatedly until "AV IN" is displayed on front panel display.
4. For AUX IN, press the **FUNCTION** button repeatedly until "AUX" is displayed on front panel display.
5. For RADIO, press the **FUNCTION** button repeatedly until "RADIO" is displayed on front panel display.

### Remote Control:

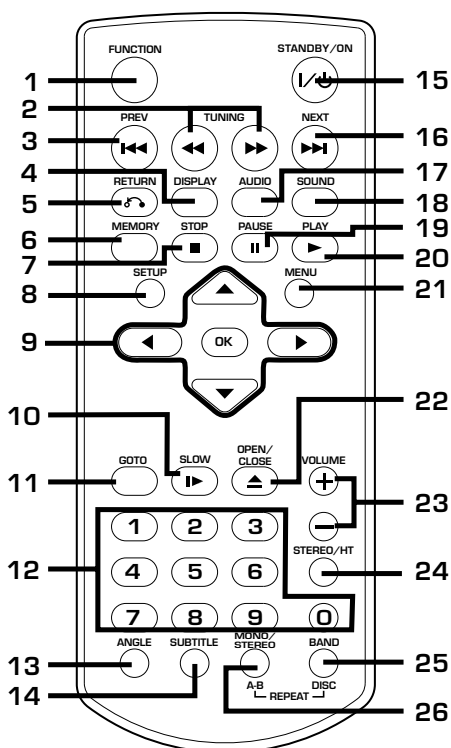

1. FUNCTION button
2. ◀ / ▶ TUNING buttons
3. ◀◀ PREV button
4. DISPLAY button
5. RETURN button
6. MEMORY button
7. ■ STOP button
8. SETUP button
9. CURSOR (▲, ▼, ◀, ▶) buttons  
OK button
10. ▶▶ SLOW button
11. GOTO button
12. Number (0-9) buttons
13. ANGLE button
14. SUBTITLE button
15. I/O STANDBY/ON button
16. NEXT ▶▶ button
17. AUDIO button
18. SOUND button
19. || PAUSE button
20. ▶ PLAY button
21. MENU button
22. ▲ OPEN/CLOSE button
23. VOLUME +/- buttons
24. STEREO/HT button
25. BAND button  
REPEAT-DISC button
26. MONO/STEREO button  
REPEAT A - B button

### To Play a Disc:

1. Press the **POWER (ON/OFF)** button down on front panel to power on the unit.

The unit is on standby and the standby indicator lights up.

2. Press the **I/O STANDBY/ON** button.

3. Press the **FUNCTION** button repeatedly to select DVD mode.

4. Press the **▲ OPEN/CLOSE** button. The disc tray opens.

5. Place a disc onto the disc tray with the label side up.

6. Press the **▲ OPEN/CLOSE** button. The disc tray closes.

It takes a short while for your unit to load the disc. After loading, the unit will automatically either bring you to the main menu of the DVD or start playback of the disc.

7. If the unit does not automatically start playing the DVD, press the **▶ PLAY** button.

8. To stop playback, press the **■ STOP** button.

### To Operate AM/FM Tuner:

1. Press the **FUNCTION** button to select RADIO.

2. Press the **■ STOP** button on the front panel or the **BAND** button on the remote control to select AM or FM.

3. Press the **◀◀ TUNING ▶▶** buttons on the remote to tune in to a desired station.

4. Auto Tuning:

- Press and hold the **◀◀ TUNING ▶▶** buttons on the remote until the tuner starts searching for a station, then release. After tuning in a station, the search stops.
- The search may not stop at a station with a very weak signal.

### To Select the Listening Channel:

When the disc is stopped, you can press the **STEREO/HT** button on the remote control to select the speakers output mode (2.1 channel or 5.1 channel).

Notes:

- 2.1 channel represents the audio/sound output from Front Left/Right speakers and Subwoofer.
- 5.1 channel represents the audio/sound output from Front Left/Right, Rear Left/Right, Center speakers and Subwoofer.